
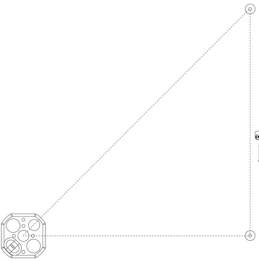


aa.

lookbook,
instructions.


anony.ca

1. Disconnect power.

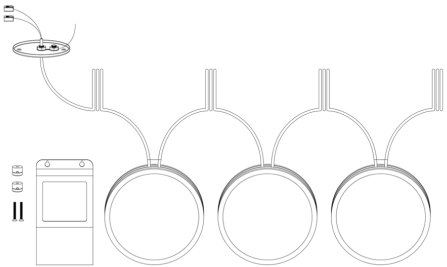


2. Layout points on ceiling.

3. Drill gripper bodies to ceiling.

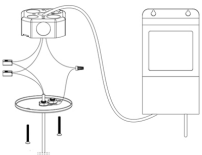

4. Connect positive, negative,
and ground.

5. Screw canopy plate to junction box.

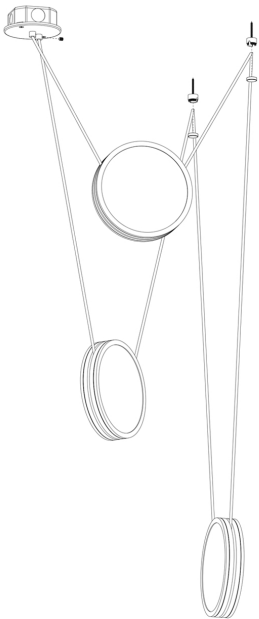

6. Match marked cables to grippers.

7. Tighten gripper caps.

8. Insert cable into canopy
strain relief.

9. Tighten set screw.

Highwire.
Modular System.

Installation to be completed by a licensed electrician.

installation
instructions.

