


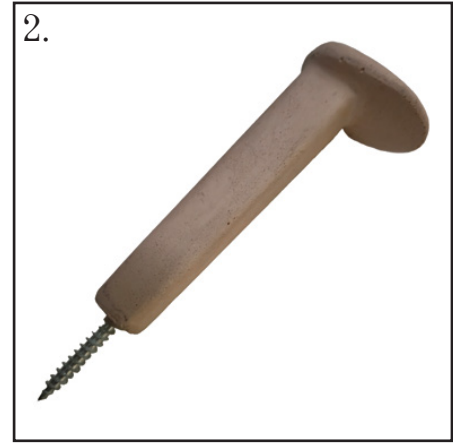

UPAT anchors must be sourced locally. Always use UPAT No. 6 (6mm).

3.



Secure the hook by screwing it onto the UPAT.

!! Do not overtighten the screw. !!

Tested to hold more than 7kg

!! WARNING !!

Incorrect installation may result in product damage. Proper installation is mandatory.