

Assembly & Care Guide

New Works Shelving System

Knut Bendik Humlevik

Thank you for choosing the New Works Shelving System designed by Knut Bendik Humlevik. We hope you will enjoy it as much as we enjoyed making it. Please follow this guide to ensure correct installation, assembly, and care of your New Works product.

Contents

Fixation of Wall Bars

Guide for 450, 900, and 1900 wall bars	5
1. Drill guide placement, horizontal holes	5
2. Leveling	6
3. Drilling horizontal holes (holes A and B)	6
4. Drill guide placement, vertical holes (holes I, II, ...)	7
5. Leveling	7
6. Drilling vertical holes (holes I, II, III, ...)	8
7. Insert Plugs	8
8. Fixation of Wall Bars	9

Module and Shelf Assembly

Standard Shelf Assembly	11
1. Standard Shelf Assembly	11
Magazine Shelf Assembly	12
1. Magazine Shelf Assembly (I)	12
2. Magazine Shelf Assembly (II)	13
Desk Assembly	14
1. Desk Assembly (I)	14
2. Desk Assembly (II)	15
3. Desk Assembly (III)	15
Wardrobe Shelf Assembly	16
1. Wardrobe Shelf Assembly (I)	16
2. Wardrobe Shelf Assembly (II)	17

Attachment of Modules and Shelves

Shelf attachment	19
1. Placement	19
2. Attachment	20
Angled Shelf Attachment	21
1. Placement	21
2. Attachment	22
Desk Attachment	23
1. Placement	23
2. Attachment	24
Rack and Hooks Attachment	25
1. Slide on hooks.	25
2. Attachment	26
Cabinet Attachment	27
1. Attachment on wall bars	28
2. Attachment on a wall	29

Attention

Please read these instructions carefully and retain them for future reference to ensure that the product is used correctly. For your safety, please study each step of this guide before you begin the assembly.

New Works will not take any responsibility for accidents or injuries that occur due to misuse or unintended use of the product. This includes use of the product in unintended environments.

If you have any questions, please do not hesitate to contact us via email: info@newworks.dk

Safety Precautions

Universal wall plugs are delivered with this product. Always pay attention to your wall type and use the correct plugs accordingly. If you are mounting directly onto plaster walls we recommend seeking professional help before continuing with the installation.

Always check if you have piping or electrical installations where you intend to install this product. Always consult professionals if you are in doubt.

Cleaning Instructions

Wipe the product with a soft dry or moist cloth. Do not use any abrasive cleaning tools and never use strong cleaning agents such as household glass cleaner, white spirit, or turpentine.

Required Tools

- Drilling machine
- Drill, bore size Ø7 mm
- Tubular spirit level
- Screw driver with pozidriv or philips bit




Wall Bar Fixation

Guide for New Works Shelving System

Fixation of Wall Bars

Guide for 450, 900, and 1900 wall bars

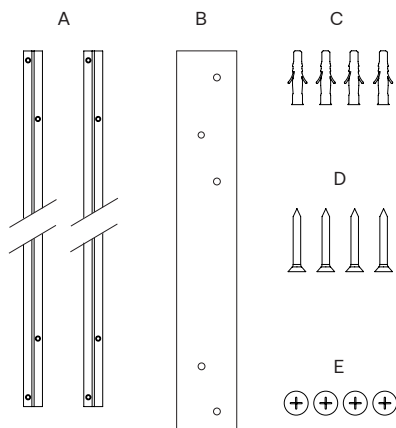

A - Wall bars

B - Drill guide

C - Universal Plugs


D - 4,2 mm self-tapping screws

E - Screw covers

Attention: Make sure to use the correct wall plugs for your wall type. New Works does not take responsibility for unsafe mounting. Mounting of New Works Shelving System onto plaster walls is never recommended.



Attention: Always mount the wall bars with all available screws.

Note: The number of items shown in the drawing might not correspond to the number of items in your package. This depends on the product you have purchased.

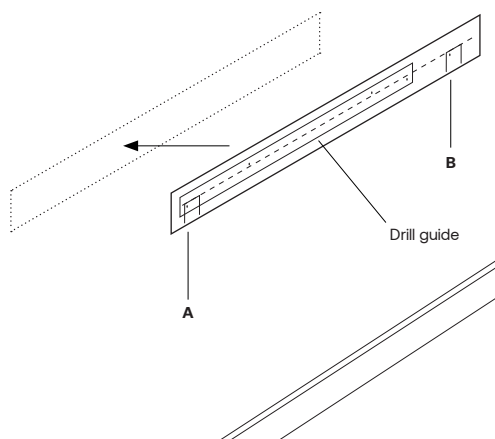

1. Drill guide placement, horizontal holes

Place the drill guide (B) horizontally on the wall. Make sure hole A is to your left, and hole B is to your right.

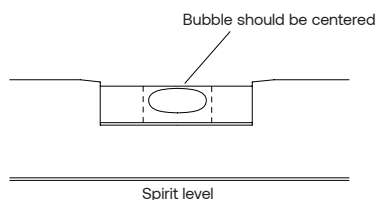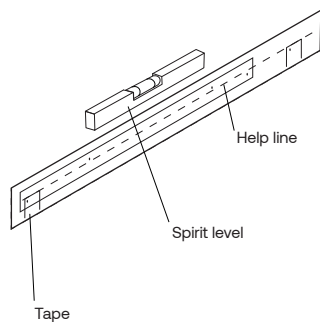


2. Leveling

Use a spirit level to adjust the drill guide. Securely tape the drill guide to the wall, when you feel it is level to the floor.

Tip: Level the drill guide, by using the dotted 'Help line' on the drill guide as a reference line.


Tip: A spirit level is completely level, when the bubble is centered between the two lines.

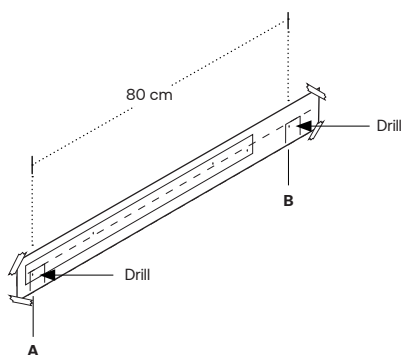

3. Drilling horizontal holes (holes A and B)

Make sure the drill guide is securely taped to the wall. Either mark the holes through the paper with the drill bore, or bore directly through the paper.

Tip: There should be 80 cm between each hole. (hole A and B)

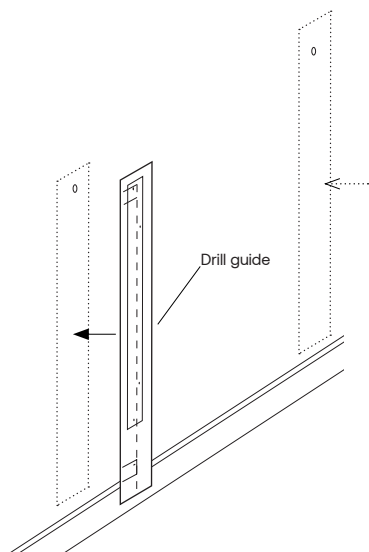


4. Drill guide placement, vertical holes (holes I, II, ...)

Flip the drill guide 90°, so that the drill guide is upright.

Place drill hole **I** on the drill guide over the previously drilled hole **A**.

Attention: Since the 1900 wall bar is longer than the drill guide, the two remaining bottom holes must be marked using the wall bar.

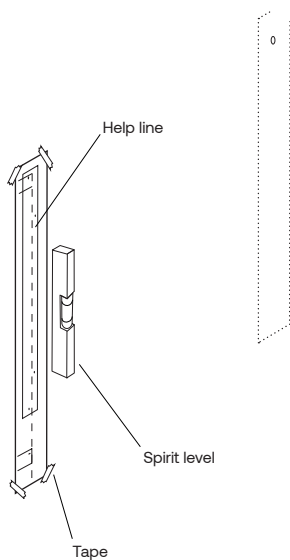

5. Leveling


Use a spirit level to adjust the drill guide. Securely tape the drill guide to the wall, when you feel it is level to the floor.

Tip: Level the drill guide, by using the dotted 'Help line' on the drill guide as a reference line.


Tip: A spirit level is completely level, when the bubble is centered between the two lines.

Repeat this step for each wall bar.

450 wall bars or 900 wall bars

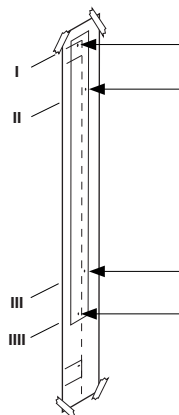

1900 wall bars

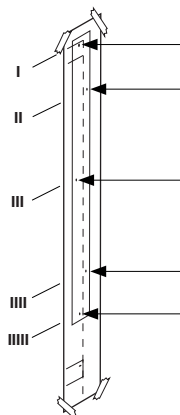

6. Drilling vertical holes (holes I, II, III, ...)


Make sure the drill guide is securely taped to the wall.

Either mark the holes through the paper with the drill bore, or bore directly through the paper.

(arrows indicate drilling spots)


450 wall bars or 900 wall bars

4 x plugs for each bar

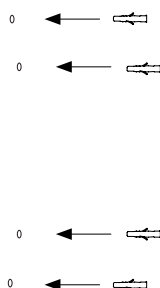

1900 wall bars

5 x plugs for each bar

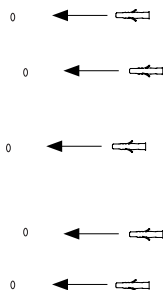


7. Insert Plugs

Take the universal wall plugs (C) or plugs appropriate for your wall type. Insert one in each hole. Make sure the plugs do not stick out of the wall.

Attention: If you are using your own plugs, make sure they fit 4,2 mm self-tapping screws.


450 wall bars or 900 wall bars

4 x Self-tapping screws

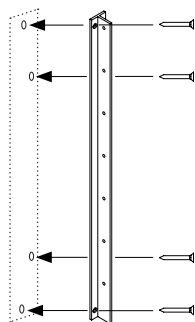

1900 wall bars

5 x Self-tapping screws

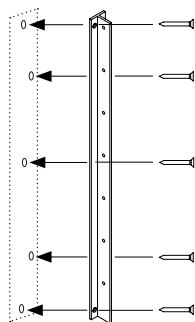

Wall bar

8. Fixation of Wall Bars

Take wall bars (A), and fasten them to the wall with self-tapping screws (D).

Tip: You can use the screw covers included in the box to hide the mounted screws (E)



Repeat this step for the all wall bars.

Module and Shelf Assembly

Guide for New Works Shelving System

Standard Shelf Assembly

Guide for 450, 900, and 1900 wall systems

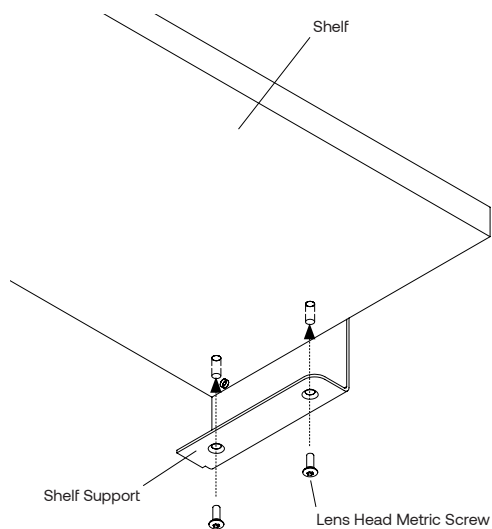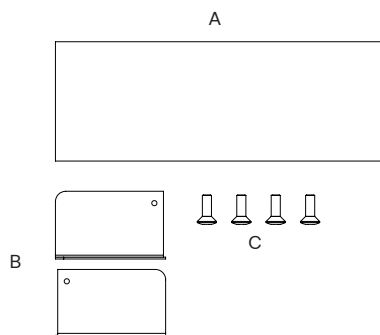



1. Standard Shelf Assembly

Use 4 x lens head metric screws (C) and 1 x set of shelf support (B) and attach them to the shelf (A)

Attention: Do not overtighten the screws.

Repeat for both shelf support sides.

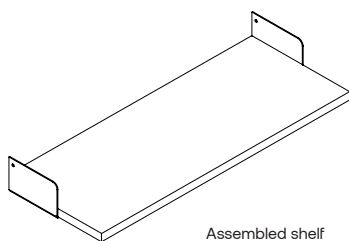

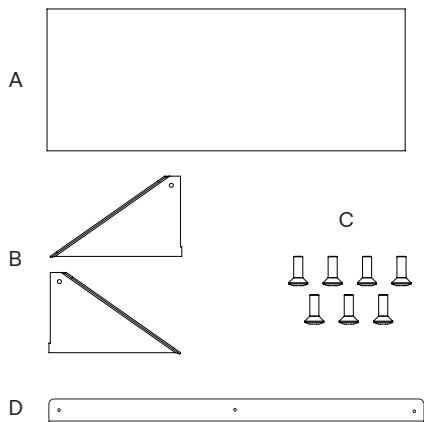

Magazine Shelf Assembly


Guide for 450, 900, and 1900 wall systems

- A - Magazine shelf
- B - Magazine shelf support
- C - Lens head screws
- D - Magazine bar

1. Magazine Shelf Assembly (I)

Use 3 x lens head metric screws (C) and the Magazine bar (D) and attach them to the shelf (A)

Attention: Do not overtighten the screws.


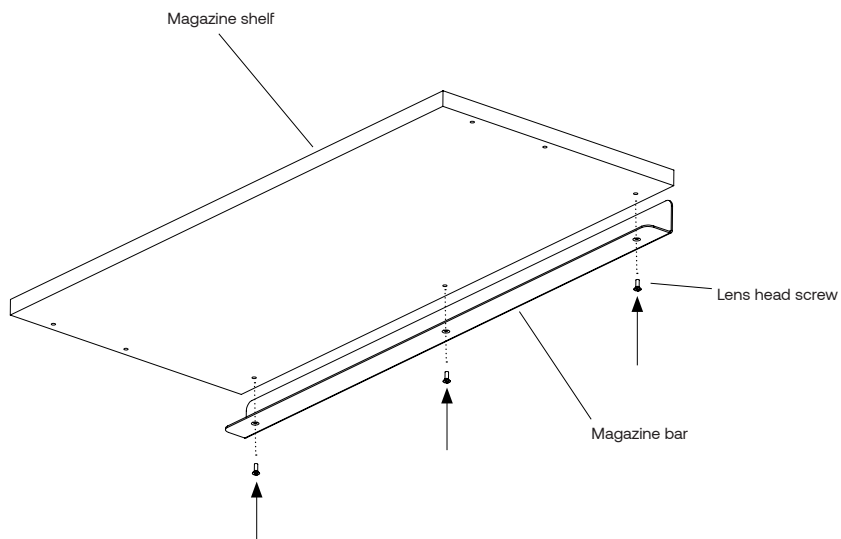


2. Magazine Shelf Assembly (II)


Use 2 x lens head metric screws (C) and 1 x set of Magazine shelf support (B) and attach them to the shelf (A)

Attention: Do not overtighten the screws.

Repeat for both shelf supports.

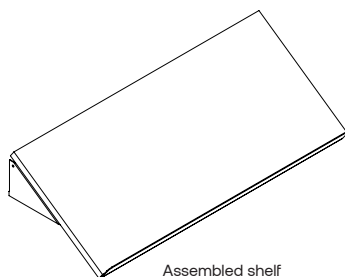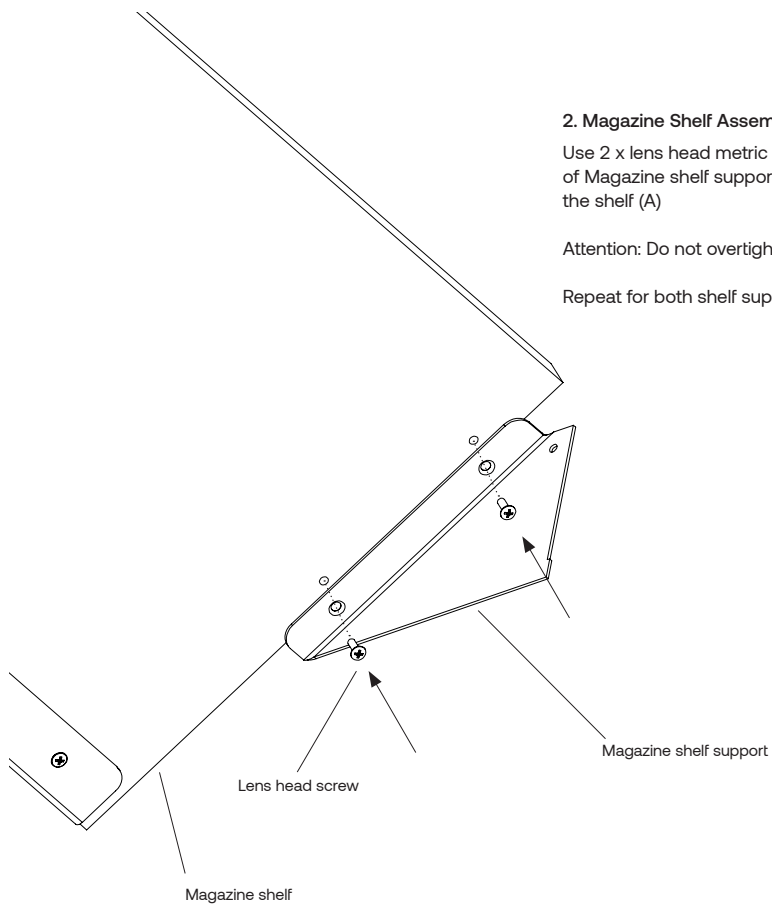

Assembled shelf

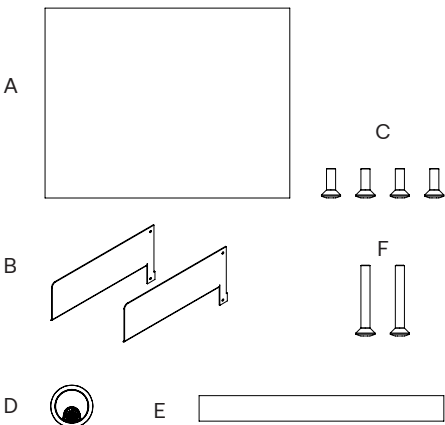

Desk Assembly


Guide for 1900 wall system


A - Tabletop
B - Desk support
C - Lens head screws
D - Hole Cover
E - Backplate
F - Long screws

1. Desk Assembly (I)

Use 2x long screws (F) to fasten the backplate (E) to the desk surface (A)

Attention: Do not overtighten the screws.

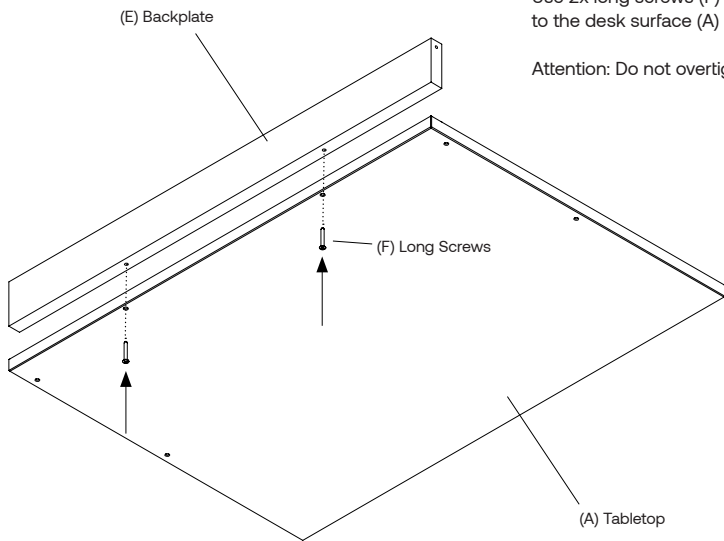


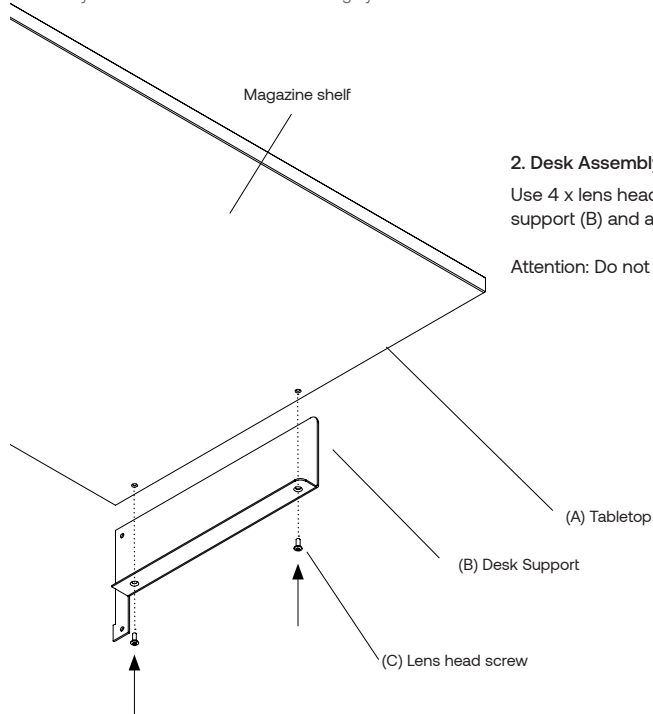

2. Desk Assembly (II)


Use 4 x lens head metric screws (C) and the Shelf support (B) and attach them to the shelf (A).


Attention: Do not overtighten the screws.

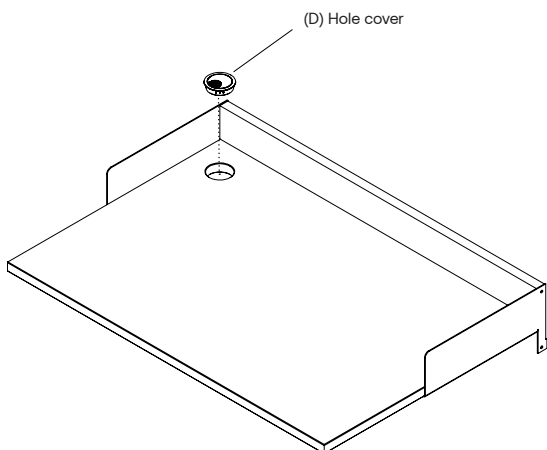

3. Desk Assembly (III)

Place the hole cover (D) in the hole in the upper left corner of the desk surface.

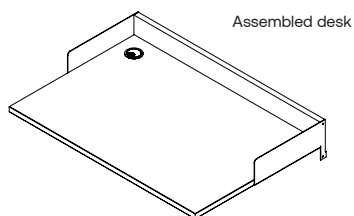

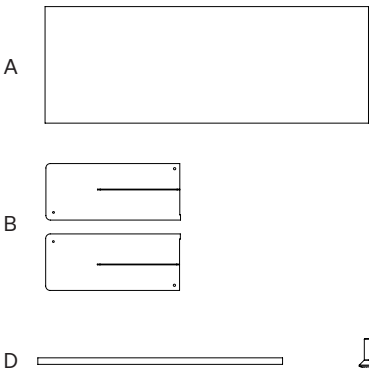

Wardrobe Shelf Assembly


Guide for 1900 wall system


- A - Deep Shelf
- B - Wardrobe Shelf Support
- C - Lens head screws
- D - Coat hanger tube



1. Wardrobe Shelf Assembly (I)

Screw to fasten the coat hanger tube (D) to the threaded pin on the left wardrobe shelf support end plate (B). Afterwards, fit the second shelf support (B) to the right side.

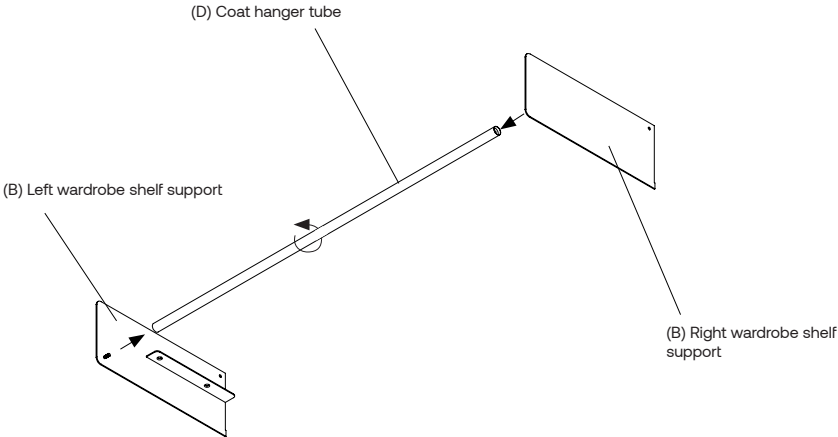

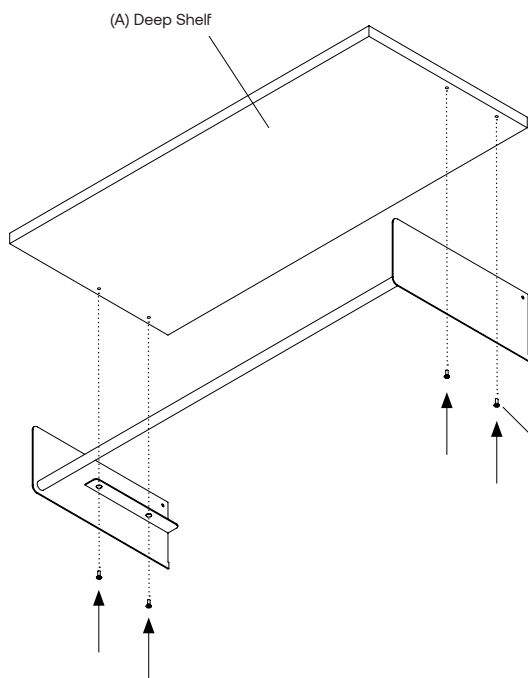


2. Wardrobe Shelf Assembly (II)

Use 4 x lens head metric screws (C) and fasten them to the deep shelf (A) through the shelf support (B).


Attention: Do not overtighten the screws.

(C) 4x Lens head screws

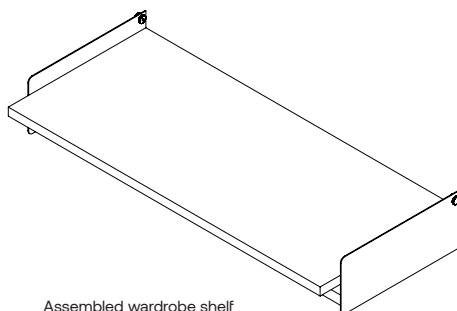

Attachment of Modules and Shelves


Guide for New Works Shelving System

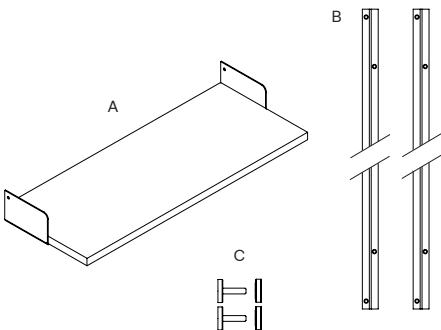

Shelf attachment


Guide for:
Standard Shelf, Wardrobe Shelf, Deep Shelf,
Pocket shelf

- A - Shelf assembly
- B - Wall bars (already fixed to a wall)
- C - Sets of thumb screws

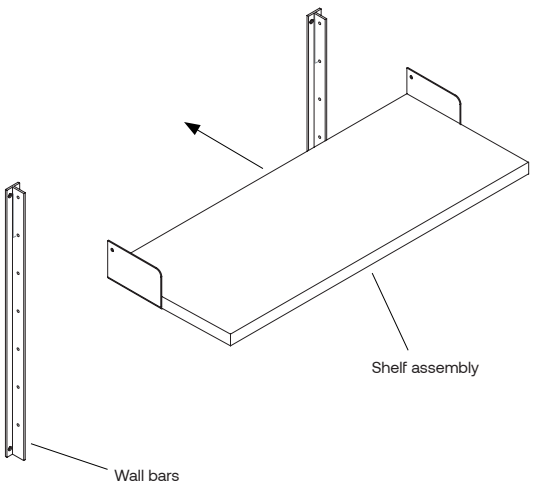

1. Placement

The shelf assembly can now be placed between a set of wall bars.

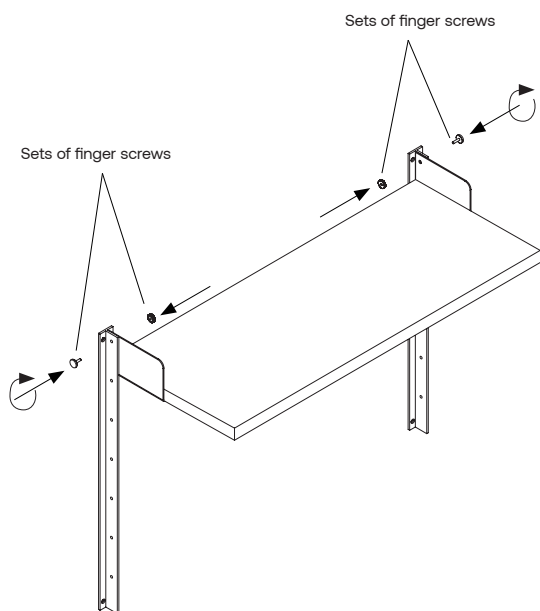


2. Attachment

Use the finger screw sets (D) to mount each shelf one by one.

Place the nut on the inside and press the finger screw through the wall bar (B) and shelf support (C) from the outside. Turn to fasten.


Repeat for each shelf.

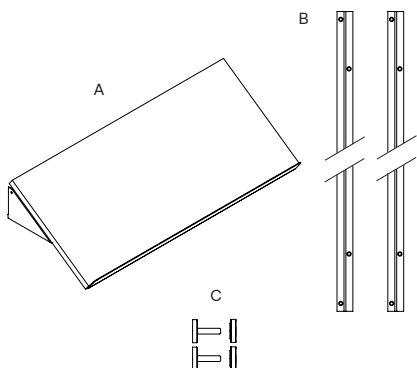

Angled Shelf Attachment


Guide for:
Magazine shelf, Slanted Shelf

- A - Shelf assembly
- B - Wall bars (already fixed on a wall)
- C - Sets of thumb screws

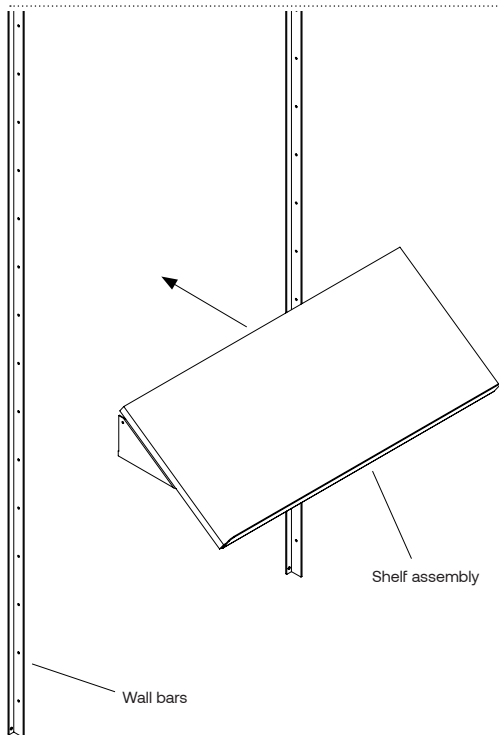

1. Placement

The shelf assembly can now be placed between a set of wall bars.

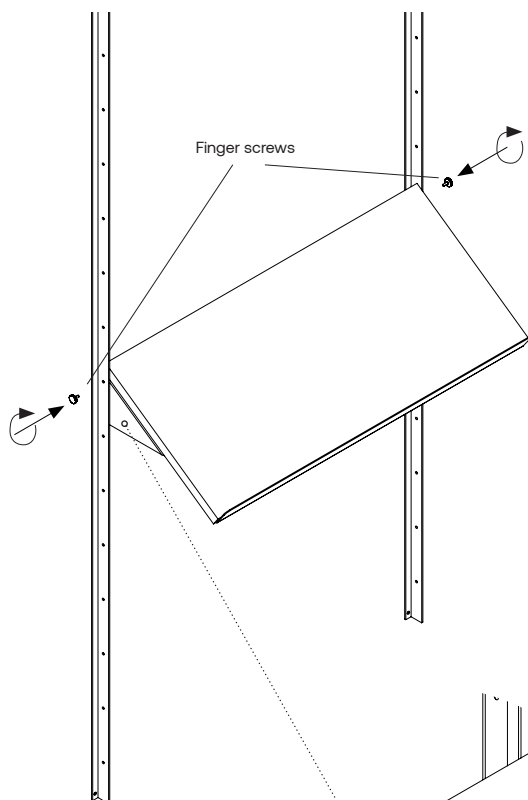



2. Attachment

Use the finger screw sets (C) to mount each shelf one by one.

Place the nut on the inside and press the finger screw through the wall bar (B) and shelf support from the outside. Turn to fasten.

Repeat for each shelf.

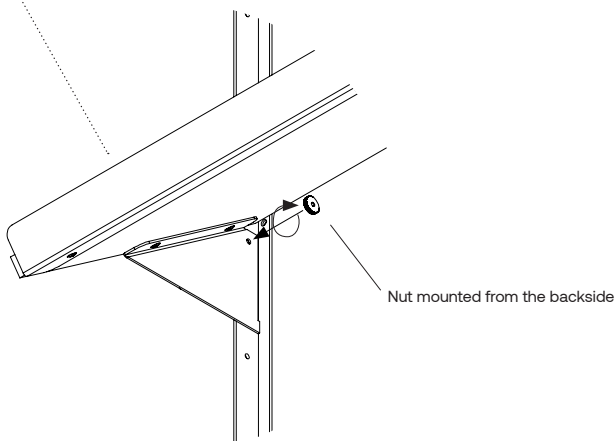


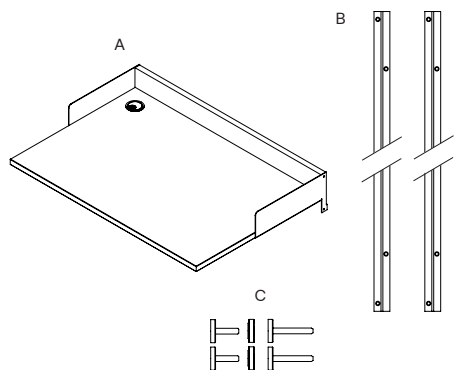

Desk Attachment


Guide for 1900 wall system

- A - Desk Assembly
- B - Wall bars (already fixed on a wall)
- C - Sets of thumb screws and two long finger screws

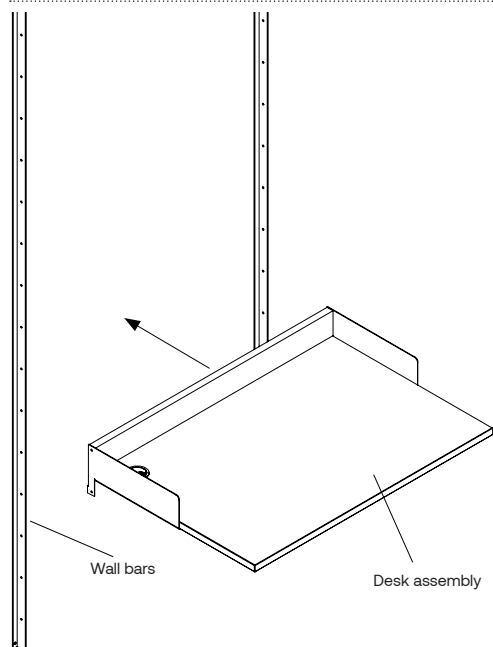

1. Placement

The desk assembly can now be placed between a set of wall bars.

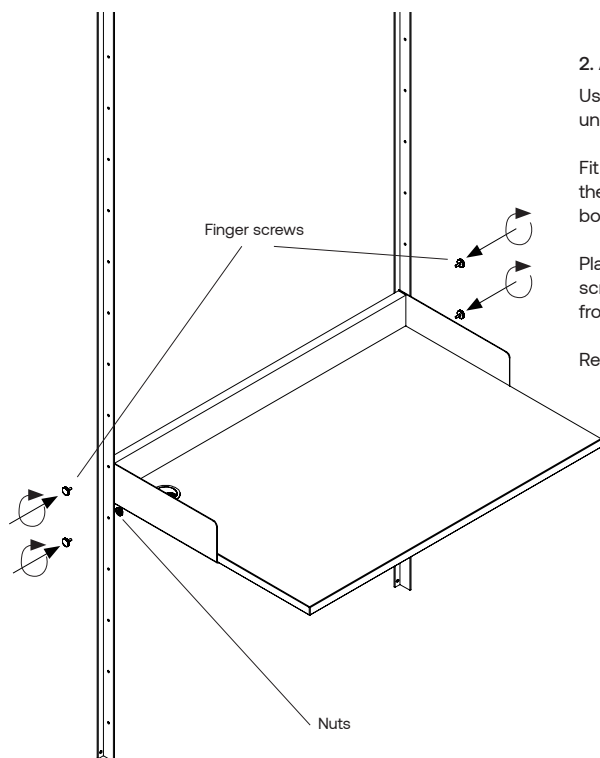


2. Attachment

Use the finger screw sets (C) to mount the desk unit to the wall bars.

Fit the long finger screws at the top, directly into the wood, and the short screws with nuts at the bottom.

Place the nut on the inside and press the finger screw through the wall bar (B) and shelf support from the outside. Turn to fasten.


Repeat for each shelf.

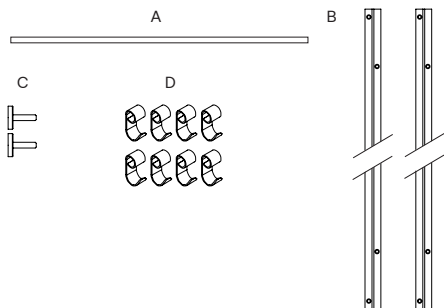

Rack and Hooks Attachment

Guide for 450, 900, and 1900 wall systems

- A - Rack tube
- B - Wall bars (already fixed on a wall)
- C - Sets of thumb screws and two long finger screws
- D - Hooks

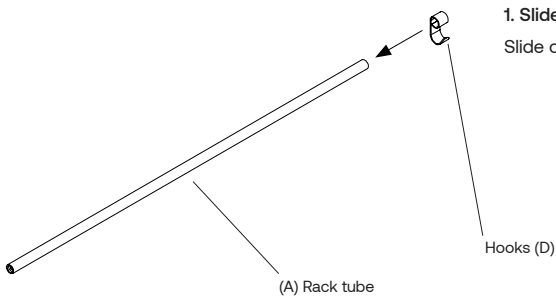






1. Slide on hooks.

Slide on the hooks (D) onto the tube (A).

2. Attachment

The tube rack (A) with hooks (D) can now be placed between a set of wall bars and attached with two finger screws (C)


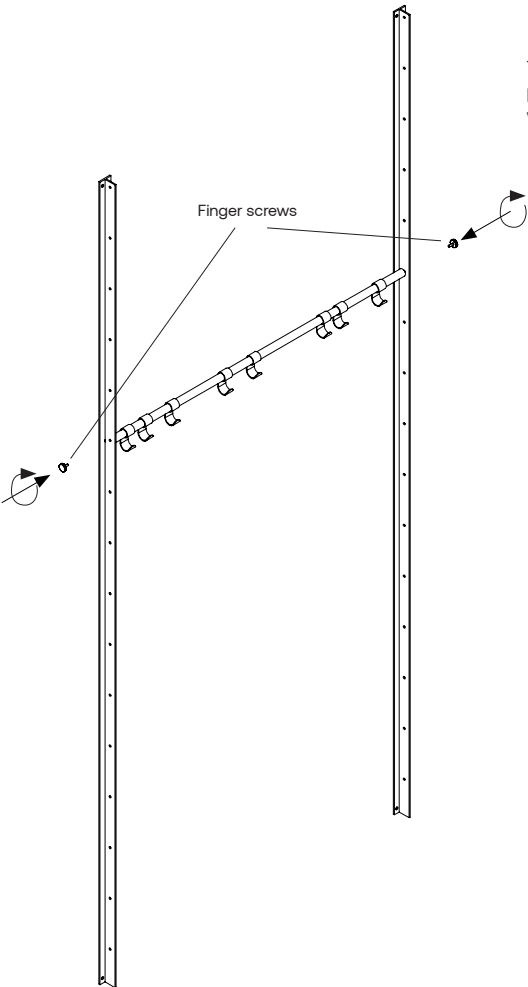


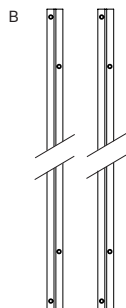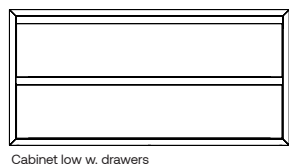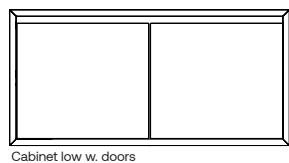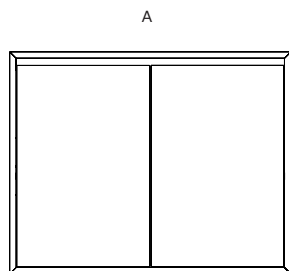


Cabinet attachment, low & tall

Guide for 450, 900, and 1900 wall systems


- A - Cabinet
- B - Wall bars (already fixed on a wall)
- C - Sets of thumb screws
- D - Universal wall plugs
- E - 4,2 mm self tapping screws
- F - Cabinet support
- G - Wall bracket

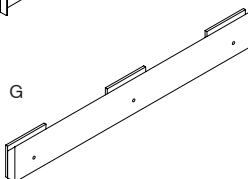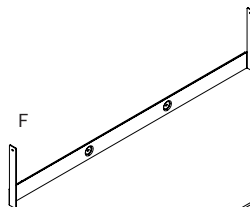

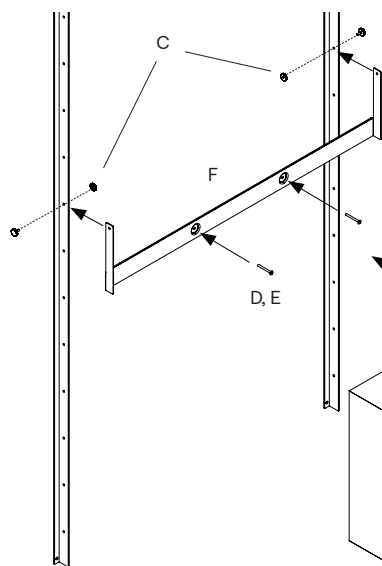

1. Attachment on wall bars


Attach cabinet support (F) to the wall bars with thumb screw sets (C). Fix the cabinet support with 2x self tapping screws and universal wall plugs (D, E). Slide on the cabinet (A) to the cabinet support.

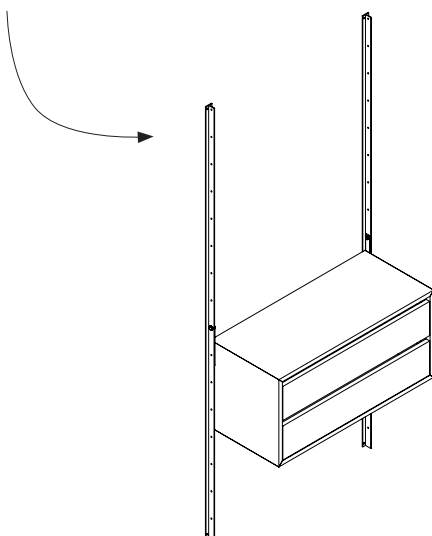

2. Attachment on a wall

Fix the wall bracket (G) with 3x self tapping screws and universal plugs (D, E).

Then slide on the cabinet (A) to the wall bracket (G)

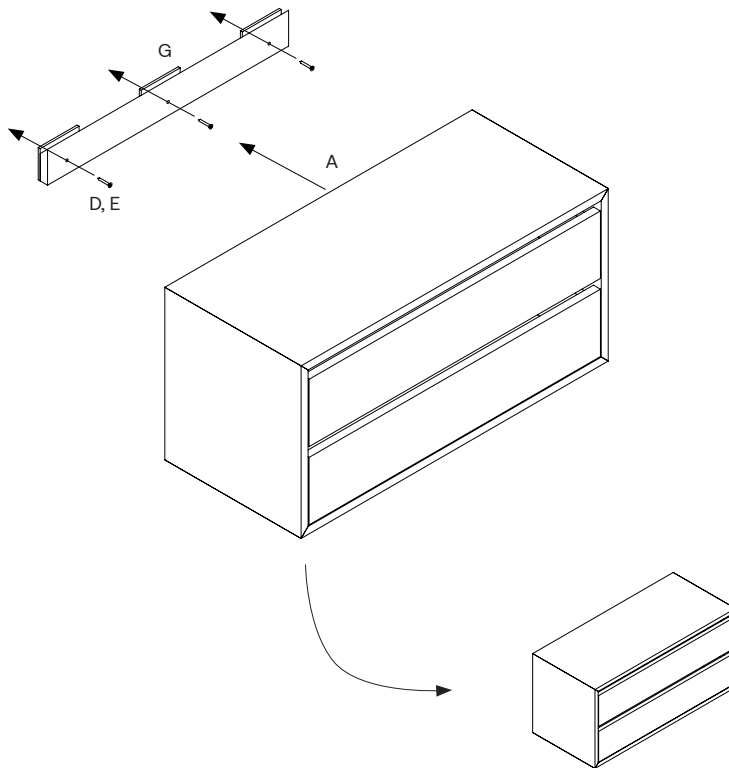

NEW WORKS.

info@newworks.dk +45 72 30 99 99

Frederiksgade 1, Ground Floor, 1265 Copenhagen, Denmark

www.newworks.dk @newworksdk