



WALL MOUNTING



The package includes the screws for wall mounting. UPAT anchors must be sourced locally. Always use UPAT No. 6 (6 mm).



The package includes also an item - Nut for M4 Screw.



Use it to fix the screw to the wall.

WARNING-installation depth




4.




CORRECT

Ensure the screw is installed to the correct depth.

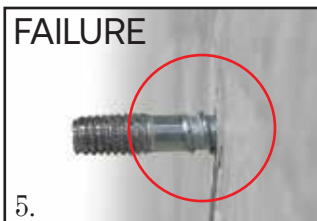

5.

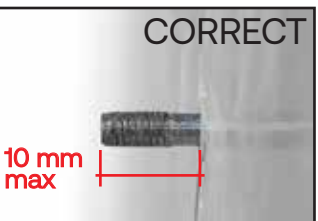

CORRECT

Remove the NUT. The installation depth must be as shown in the




Secure the hook by screwing it onto the screw.

!! Do not overtighten the screw. !!

MARINE S - Tested to hold more than 6kg
MARINE M/L - Tested to hold more than 7kg`

!! WARNING !!

Incorrect installation depth may result in product damage. Proper installation is mandatory.

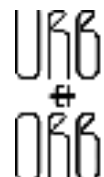

CABINET / DOOR MOUNTING



1.

Use M4/M8 screw. It's not included in the package. Must be sourced locally. M4 for cabinet - M8 for door.

Use the correct screw length. Screw length depends on door thickness.


Incorrect screw length may cause product damage.

2.


WARNING-screw length

CABINET - M4

DOOR - M8

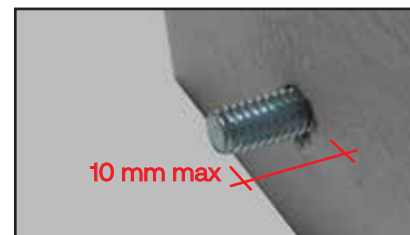

10 mm max

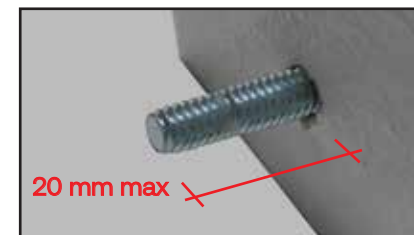

20 mm max



3.

Secure the hook by screwing it onto the screw.

!! Do not overtighten the screw. !!

!! WARNING !!

Incorrect installation depth may result in product damage. Proper installation is mandatory.