


Installation Instructions

DAN DRYER® safety baby changing station

Art.No. 659 (with safety strap)

Art.No. 660 (without safety strap)



DAN DRYER A/S

DAN DRYER A/S • Tåsingevej 2 • DK-8940 Randers SV • dandryer.com • info@dandryer.com

Read the installation instructions thoroughly before commencing installation.

The design of the safety baby changing station makes it easy to mount in even very small rooms. The changing table must be mounted onto a wall which is suited to carry the weight of the table as well as a baby – preferably a solid wall! For indoor use only.

Where to mount the Baby Changing Station

Determine the ideal place to mount the baby changing table. Keep in mind that the depth of the changing table is 625 mm in open position. The distance from the floor to the lower edge of the table mountings should be approx. 750 mm (see FIG. 1). Doorways, sinks etc. should of course also be taken into consideration when choosing where to mount the changing table.

IMPORTANT: Do NOT mount the table in a chlorine-containing environment!


Marking and drilling holes

To mount the changing table onto brick, gas concrete or the like, use 10 mm screws and matching universal plastic dowels – e.g. Fischer fixings type S-12. When mounting the changing table onto a cavity wall of min. 16 mm (or 2 x 13 mm) plaster board, we recommend prior mounting of a reinforcement plate of stainless steel, plywood or the like, onto which the changing table is subsequently mounted. Attach reinforcement plate to the wall using a considerable number of special metal cavity fixings, Fischer part. no. BC 62328 or equivalent (part. no. BC 62315 for double plate). The changing table itself is also mounted with these screws and dowels – plus one metal washer per screw hole. For further details, please refer to the instructions of the dowel supplier. In places where plaster walls have not yet been finished, we suggest mounting a 16 mm plywood board on the inside of the plaster wall, rendering the need for a reinforcement plate on the outside unnecessary. Mark and drill holes as indicated on FIG. 1. The top holes for the table mountings should be drilled into solid brick - not into a joint.

Mounting the Baby Changing Station

- ❶ Disassemble the cover plates of the table mountings by removing the 6 screws (3 on each) with a Torx screwdriver no. 20.
- ❷ Mount the table onto the wall, making sure that it is completely level.
- ❸ The baby change unit is factory pre-adjusted to easily close when given a slight push from open position.
- ❹ Check that the changing table is mounted solidly onto the wall.
- ❺ Check that the shock absorbers can pass freely when opening and closing the table.
- ❻ Reassemble the cover plates onto the mountings.

Fig. 1

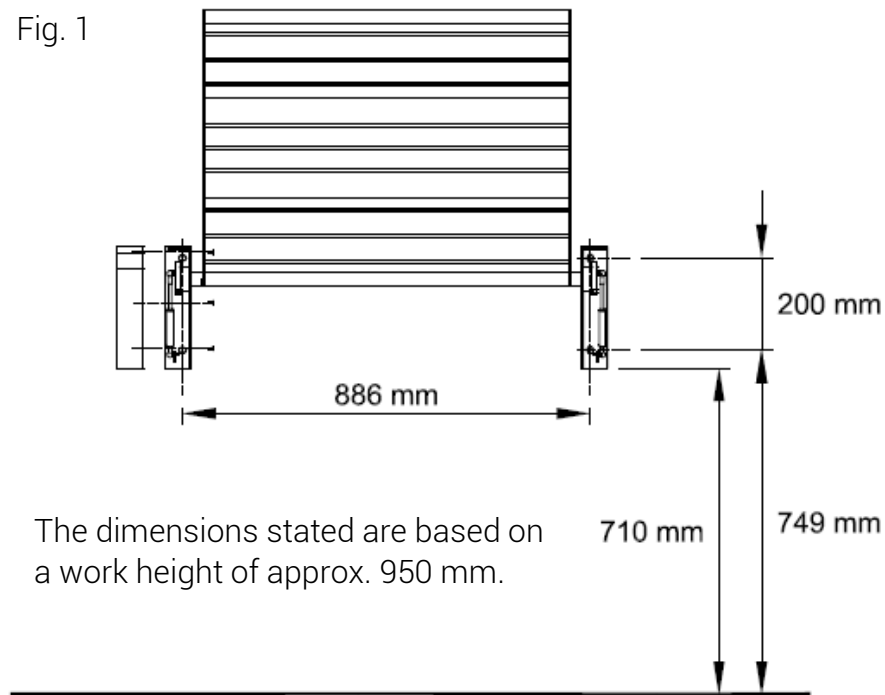

The dimensions stated are based on a work height of approx. 950 mm.

IMPORTANT: Be sure to drill the holes for the mountings exactly vertically underneath each other, or the pneumatic shock absorbers inside the mountings may break.

Maintenance, cleaning and malfunction

The table requires no specific maintenance, but regular inspection and testing is recommended.

Make sure the table can be opened and closed smoothly.

If the table is fitted with a safety strap, this strap must be inspected regularly to make sure it is intact, and the buckle is working properly.

Contact your supplier or DAN DRYER A/S immediately if the table is defective.

The table can be cleaned using a damp cloth. Use only neutral, liquid cleaning products that do not contain solvents.

Never leave a child unsupervised on the table!

Do not use if damaged, defective or if not securely fixed to the wall.

You are responsible for making sure the table is safe to use.


Accessory

We recommend that you supplement the Baby Changing Station with the DAN DRYER Paper Roll Holder, article no. 656.



SPARE PARTS LIST

Baby changing table 659

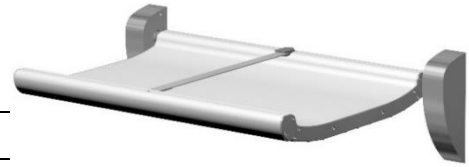

Pos. No.	Art. No.	Spare part
1	65524	Hood for mounting bracket, complete, left
2	65525	Hood for mounting bracket, complete, right
3	65541	Crank
4	65546	Mounting bracket, complete, left
5	65547	Mounting bracket, complete, right
6	65534	Spacer Ø25 mm, for spindle
7	65531	End flange, left
8	65532	End flange, right
9	20040	Nut M5, stainless, self-locking
10	65516	Aluminium tabletop, 790 mm, white
11	20038	Nut M6, stainless
12	20047	Tight-fitting bolt M5 6x60 mm
13	20041	Allen bolt, stainless, M6 x 25 mm
14	20057	Locking ring Ø40 DIN 472
15	65562	Spherical bearing
16	20042	Allen bolt for crank (setscrew), stainless, M6 x 16 mm
17	65407	Gas spring, 350 N (Scandiloc or Megatrade)
	65406	Gas spring replacement set for the left and right side, complete with crank, screws etc.
18	65408	Spacer, flat, iron, Ø5.3 x 15 x 2 (one spacer per gas spring)
19	20044	Screw, countersunk, stainless, M4 x 20 mm, torx
20	20053	Screw, stainless, M6 x 20 mm, torx
21	20835	Spacer, flat, stainless
22+23+24	65551	Complete safety belt with buckle
25	40068	Screw, stainless, M4 x 12 mm, torx

COMPONENTS

DAN DRYER® BABY CHANGING TABLE, ART. NO. 659

