

USER MANUAL

BJÖRK SANITARY BIN

Prod. no. 3332/3334/3336



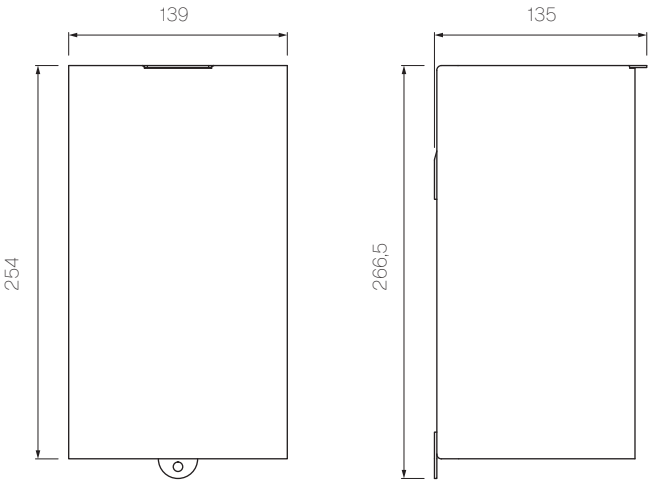


TABLE OF CONTENTS

Dimensions and technical specifications	3
General safety information	4
Installation	4
User guide	5
Cleaning and maintenance	5
Parts list	6
Spare parts list	7

DIMENSIONS AND TECHNICAL SPECIFICATIONS

Dimensions / unit of measurement: mm



IMPORTANT!

This product falls within the scope of the WEEE directive on recycling and recovery of waste electrical and electronic equipment.



- This product should not be disposed of with general household waste
- This product must be reused if possible
- Contact your local authority for further details
- This product may also be returned to the manufacturer/retailer for proper treatment, recovery, and recycling



TECHNICAL SPECIFICATIONS


DESCRIPTION	DATA
Material	Powder coated stainless steel
Capacity	3 L
Net weight	1,40 kg
Model	3332, white, powder coated stainless steel
	3334, black, powder coated stainless steel
	3336, classic RAL colour, powder coated stainless steel

GENERAL SAFETY INFORMATION


Dispose of the packaging material properly, as it poses a potential choking hazard.

INSTALLATION


1. Place the mounting template on your desired location. Drill the 3 holes indicated by the template.

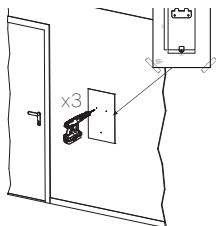


2. Mount the wall bracket using the two upper holes, and secure it with screws suitable for the type of wall.

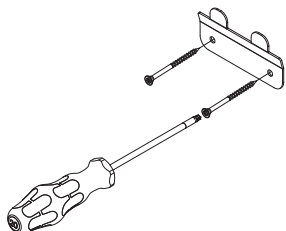


3. Mount the sanitary bin hygiene bucket onto the wall bracket as instructed.

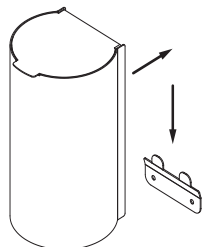


4. Secure the last screw beneath the bucket as instructed. Use a screw suitable for the type of wall.

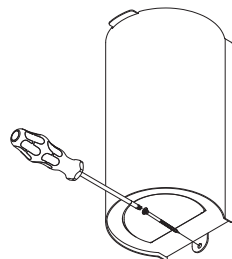

5. Open the lid of the sanitary bin and place the inner bucket inside the hygiene bucket.

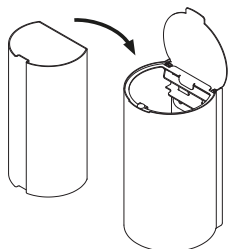

5. Close the lid. The hygiene bucket is now ready for use.

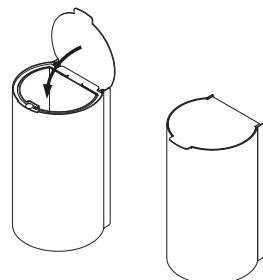


USER GUIDE

- Open the lid of the hygiene bin
- Carefully place waste into the bin without touching the inside
- Close the lid after each use to maintain hygiene
- Replace the bag when full to prevent odors and the spread of bacteria
- Clean the inside of the bin with a damp cloth and mild soap as needed

CLEANING AND MAINTENANCE

Clean with a damp cloth using a mild soap solution. Never use abrasive or corrosive cleaners, or cleaning products with a scouring effect.

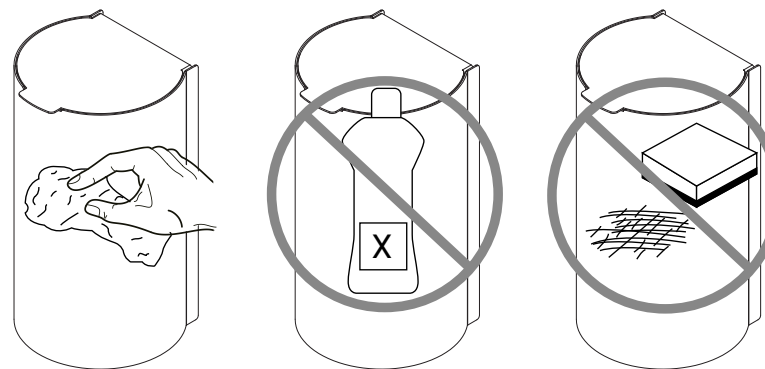

TROUBLESHOOTING AND REPAIR

Contact DAN DRYER for assistance.




PARTS LIST

N°	Descriptipn
1	Front cover
2	Lid
3	Wall bracket
4	Bucket
5	Glass/PVC base
6	Set screw M5x8
7	Washer

SPARE PARTS LIST

Pos. nr.	Art. nr.	Spare part
2	33322	Lid
5	33215	Glass/PVC base
6	55003	Set screw M5x8
7	20860	Washer

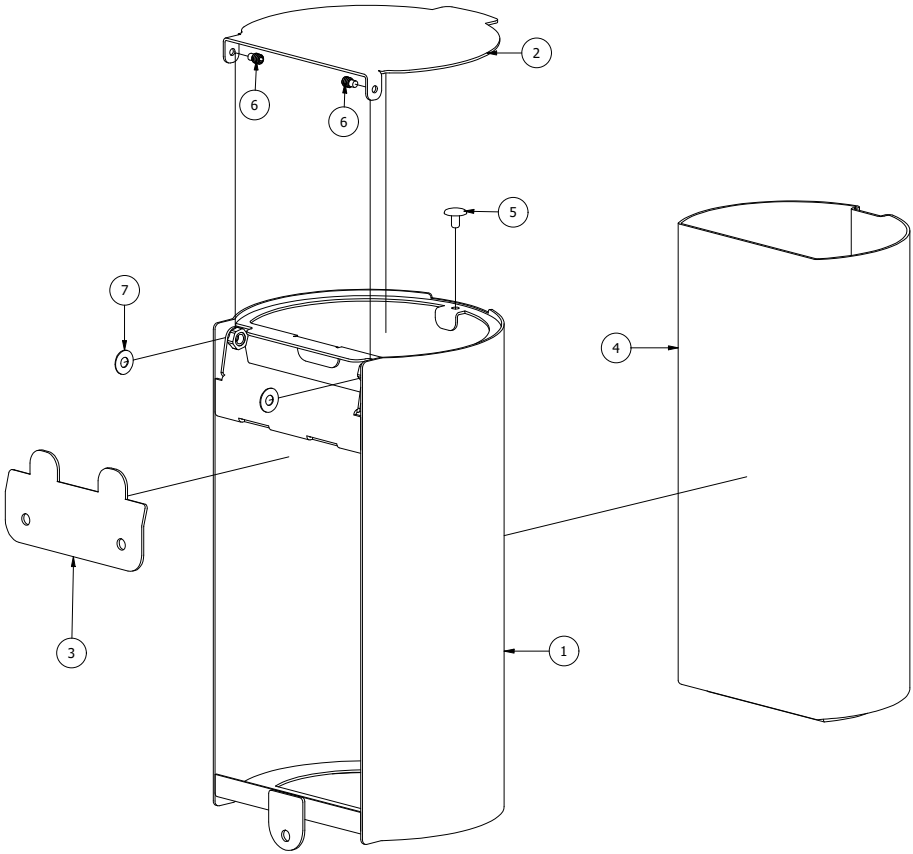

DAN DRYER A/S
Tåsingevej 2
DK - 8940 Randers SV

+45 8641 5711
info@dandryer.com
dandryer.com

