

USER MANUAL

GRAB BARS

Prod. no. 378X/379X/380X/381X



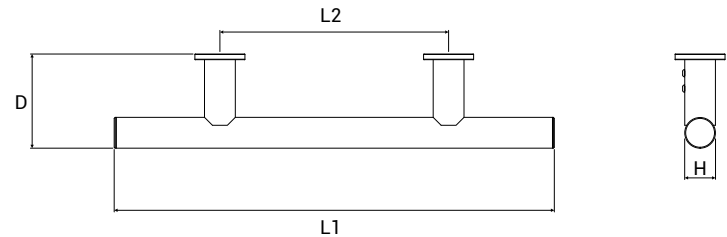


TABLE OF CONTENTS

Dimensions and technical specifications	3
Installation	4
User guide	5
Parts list	7
Spare parts list	7

DIMENSIONER AND TECHNICAL SPCIFICATIONS

Dimensions/unit of measurement: inch



TECHNICAL SPCIFICATIONS

Prod. No	L1	L2	D	H	Weight	Material
3780 3782 3784 3786	18"	9.37"	3.86"	Ø1.26"	3.16 lb	Powder coated stainless steel
3790 3792 3794 3796	24"	15.35"	3.86"	Ø1.26"	3.67 lb	
3800 3802 3804 3806	36"	27.36"	3.86"	Ø1.26"	4.68 lb	
3810 3812 3814 3816	42"	33.35"	3.86"	Ø1.26"	5.19 lb	

IMPORTANT

This product falls within the scope of the WEEE directive on recycling and recovery of waste electrical and electronic equipment.



- This product should not be disposed of with general household waste
- This product must be reused if possible
- Contact your local authority for further details
- This product may also be returned to the manufacturer/retailer for proper treatment, recovery, and recycling







INSTALLATION

1. Use the table to correctly identify the dimensions of your grab bar.


Prod. no.	L1	L2
3780 3782 3784 3786	18"	9.37"
3790 3792 3794 3796	24"	15.35"
3800 3802 3804 3806	36"	27.36"
3810 3812 3814 3816	42"	33.35"

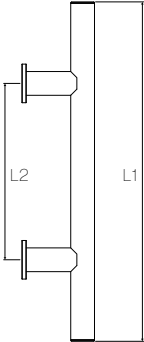


2. Drill holes for mounting.

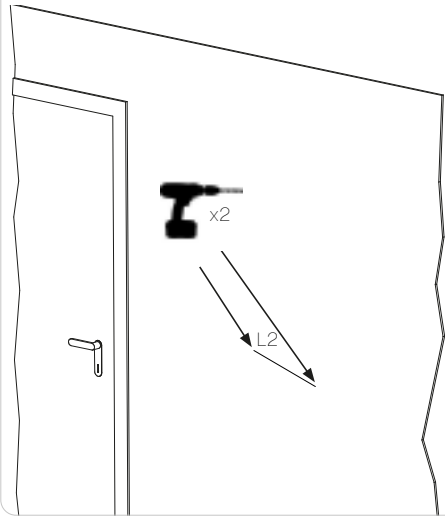


5. Fasten the grab bar to the mounting bracket using the four M4X8.

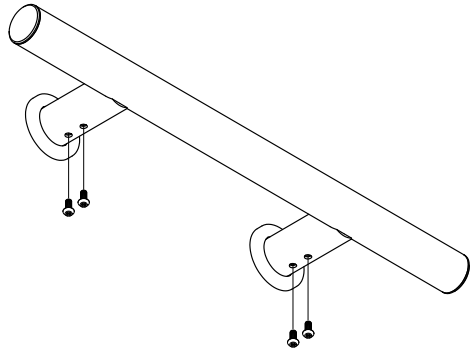


6. The grab bar is now ready for use.

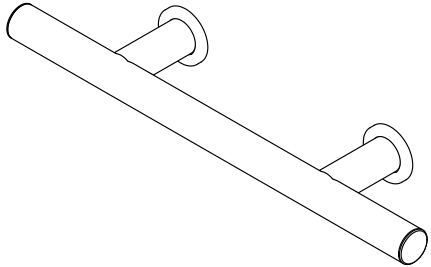

3. The mounting brackets are fastened to the wall, using screws and dowels suitable for the installation environment.

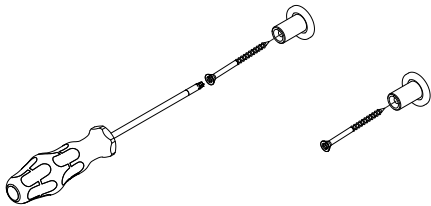

4. Mount the grab bar on the mounting bracket.

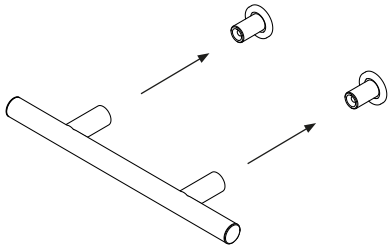


USER GUIDE

- Use grab bar for support when standing up or sitting down
- Grip bar firmly with one or both hands
- Ensure hands are dry to prevent slipping
- Do not use grab bar for hanging or pulling heavy objects
- Check bar is secure before each use

PARTS LIST

N°	Description
1	Bar Ø1.26"
2	Mounting bracket
3	Screw, M4x0.32"

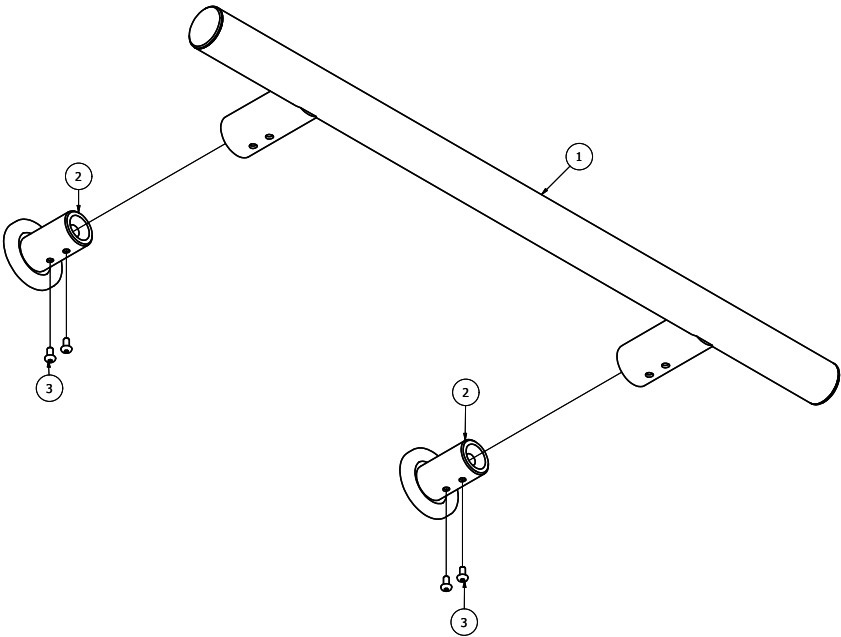

SPARE PARTS LIST

Pos. nr.	Art. nr.	Spare part
1	64401	Bar Ø1.26", 18"
	64402	Bar Ø1.26", 24"
	64403	Bar Ø1.26", 36"
	64404	Bar Ø1.26", 42"
2	64405	Mounting bracket
3	37800	Screw, M4x0.32"



DAN DRYER A/S
Tåsingevej 2
DK - 8940 Randers SV

+45 8641 5711
info@dandryer.com
dandryer.us

