

USER MANUAL

TOILET ROLL HOLDER

Left-oriented

Prod. no. 5015/5016/5017

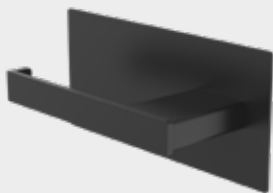




TABLE OF CONTENTS

Dimensions and technical specifications	3
General safety information	4
Installation	4
User guide	5
Back to back mounting	5
Cleaning and maintenance	6
Troubleshooting and corrective actions	6
Parts list	7
Spare parts list	7

IMPORTANT
This product falls within the scope of the WEEE directive on recycling and recovery of waste electrical and electronic equipment.




- This product should not be disposed of with general household waste
- This product must be reused if possible
- Contact your local authority for further details
- This product may also be returned to the manufacturer/retailer for proper treatment, recovery, and recycling



DIMENSIONER AND TECHNICAL SPCIFICATIONS

Dimensions/unit of measurement: inch

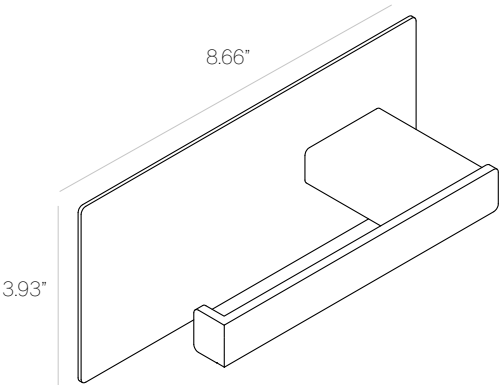

TECHNICAL SPCIFICATIONS


DESCRIPTION	DATA
Material	Wall bracket: Powder coated stainless steel. Holder: Powder coated stainless steel. Plastic insert: PETG
Capacity	1 standard roll
Net weight	1.45 lb
Model	5015, black, powder coated stainless steel 5016, white, powder coated stainless steel 5017, RAL classic, powder coated stainless steel

GENERAL SAFETY INFORMATION


Be careful during installation and make sure not to drill into water pipes or electrical installations.

INSTALLATION


1. Place the mounting template on the wall at your desired location, and drill holes for the mounting bracket.

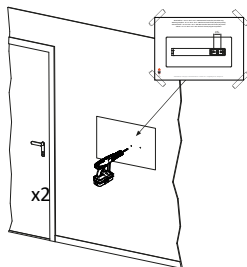


2. Remove the foil from the tape.

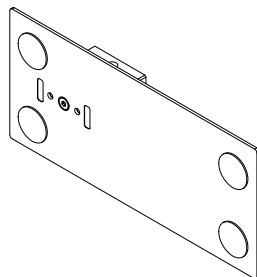


3. The bracket is placed on the wall, and fastened using screws and dowels suitable for the wall used.

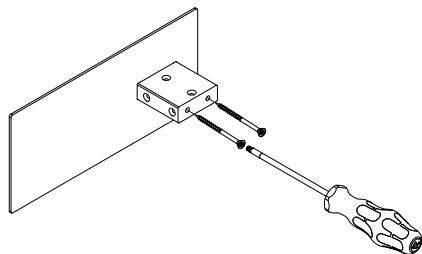


4. Place the flatiron on the bracket.

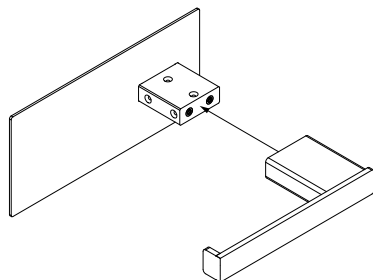

5. Fasten the flatiron to the bracket using M4X10 screws.

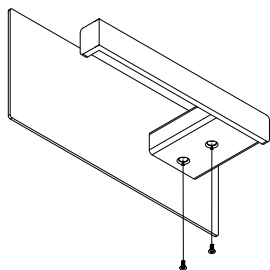

6. Place a toilet roll on the handle. The toilet roll holder is now ready to use.

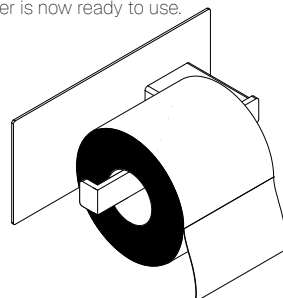


USER GUIDE

- Insert a toilet paper roll onto the holder by sliding it over the central rod
- Ensure that the roll can rotate freely and is easily accessible

BACK TO BACK MOUNTING

Two units can be mounted on opposite sides of a wall (e.g., toilet partitions) using a through screw and nut. This method allows for a stable and symmetrical installation.

- The wall must be suitable for through-wall mounting and have a maximum thickness of 15 mm
- Mounting hardware is not included – contact Dan Dryer for more information.

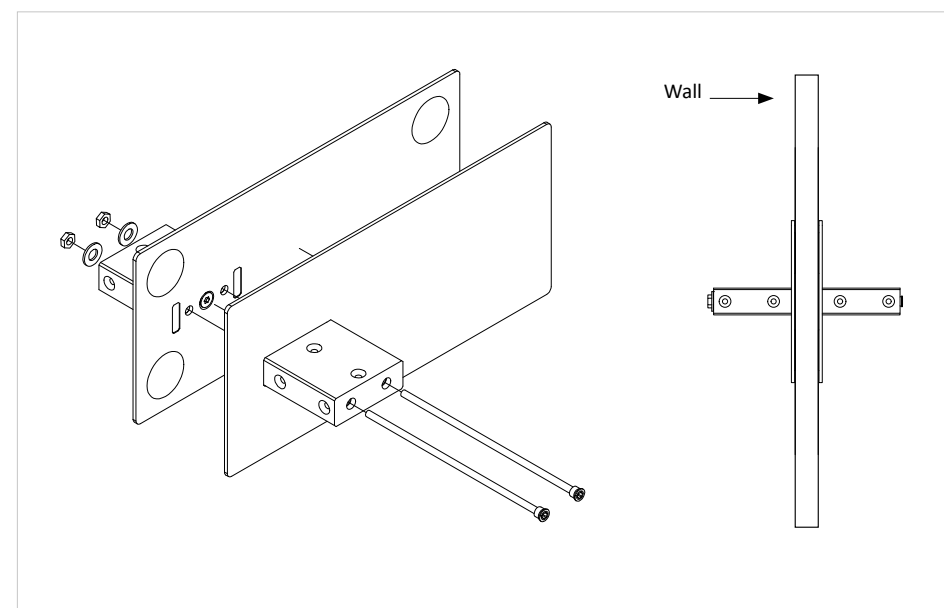

CLEANING AND MAINTENANCE

Use a damp cloth and mild cleaning solution. Never use cleaning detergents with an abrasive effect.




TROUBLESHOOTING AND CORRECTIVE ACTIONS

Contact DAN DRYER for assistance.

PARTS LIST

N°	Description
1	Backplate
2	Mounting insert
3	Left-oriented toilet roll holder
4	Screw 4x10, stainless plastic, countersunk Torx
5	Double-sided tape

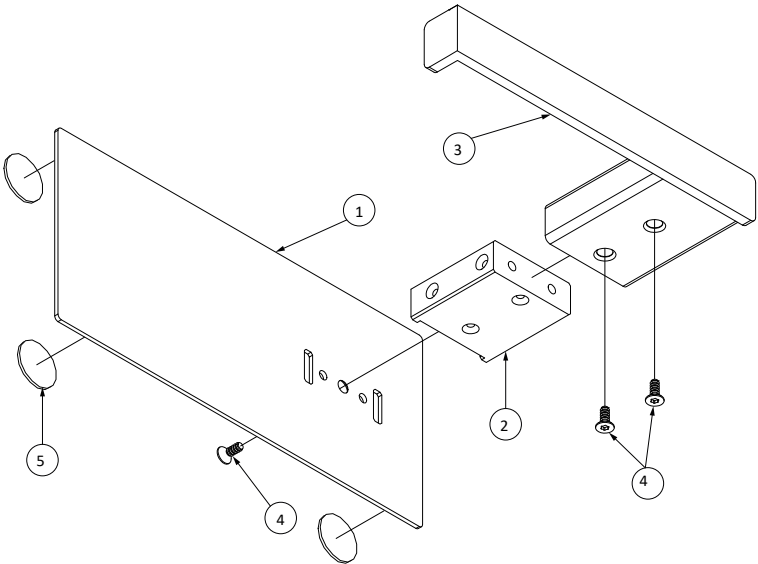

SPARE PARTS LIST

Pos. nr.	Art. nr.	Spare part
2	50105	Mounting insert
4	37850	Screw 4x10, stainless plastic, countersunk Torx
5	64537	Double-sided tape



DAN DRYER A/S
Tåsingevej 2
DK - 8940 Randers SV

+45 8641 5711
info@dandryer.com
dandryer.us

